
PLASTIC EMULSION

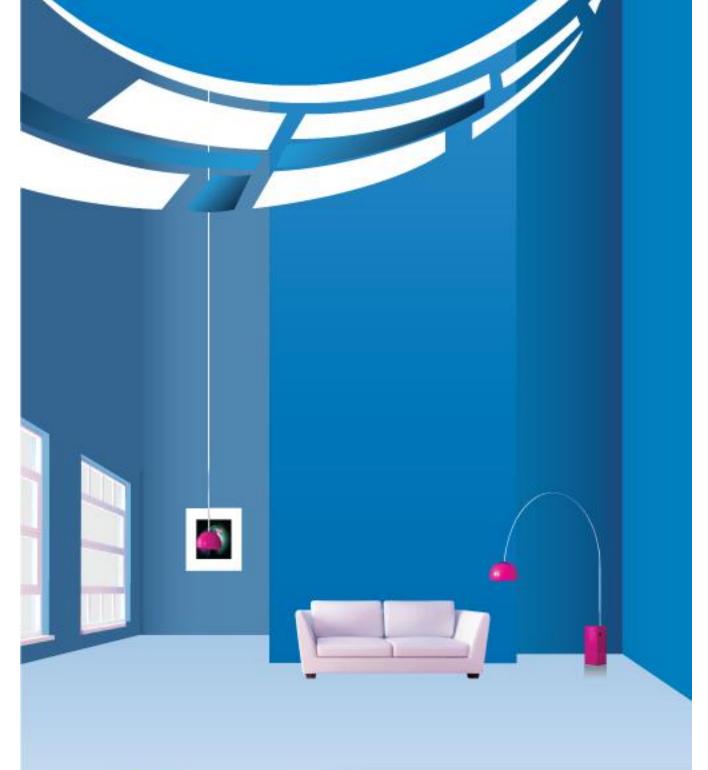

















Since All Color chips are affected by age, light, heat and mechanical coating process, the color on this card may vary from the actual paint in the container.












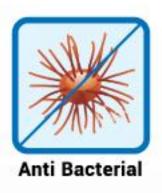






Bright & Smooth Finish



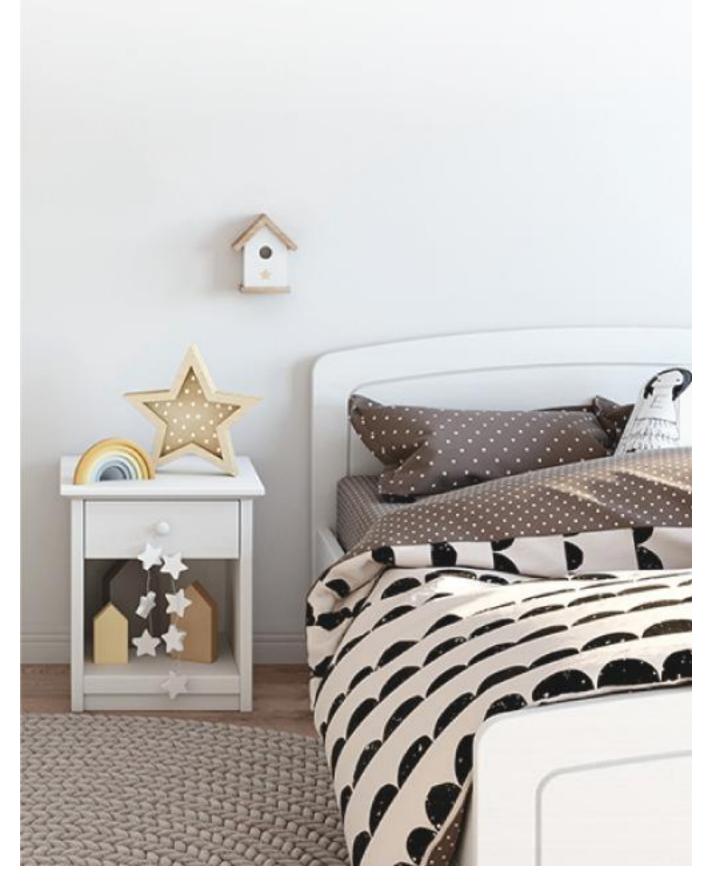

DIRECTION FOR USE

Preparation for the site: Before applying paint dust, oil and fungus should be cleaned up from the wall. For new wall use 120 sand paper or stone and for old wall use scrubber to clean up. Wall should be dried up properly before applying paint.

First Step: Use 1 coat Aclose Sealer (water based) for new wall and then dry it for 3 - 5 hours. For old wall use 1 coat Plastelite Wall Sealer (solvent based) and dry it for 18 - 24 hours. If there is a chance of salt damp then salt seal can be used as undercoat.

Second Step: For covering different flaws and ensuring smoothness, use Puttelite Wall Putty, keeps the wall drying for 3 - 4 hours. After that make the wall clean by rubbing 220 sand paper.

Third Step: Apply Wall Sealer (solvent based) or Aclose Sealer on wall and keep it drying for 18 - 24 hours and 3 - 5 hours respectively. After that make the wall clean by rubbing 320 sand paper.

Fourth Step: Thin up to 25 - 30% by adding clean tap water with Plastelite. For smooth finishing 2 coats paint can be applied. Extra 1 coat paint can be used for deep shed. Per liter 150 - 160 sqft place can be painted.

Special Note: Stir well before use. Application should be processed by clean brush and roller. It's better not to use chalk powder for accurate color. Tightly close the jar lip after every use so that air can not enter. Clean all equipments with water immediately after use. With water, mix 5% soap or detergent powder to remove stain from wall. Use a thin material to clean up properly.

ব্যবহার প্রণালী

স্থানের প্রস্তুতিঃ রং প্রয়োগের পূর্বে দেয়ালে লেগে থাকা ধূলো-বালি, তৈলাক্ততা ও আলগা ক্ষুদ্র কণিকা বা বস্তু ভালোভাবে পরিষ্কার করে নিতে হবে। নতুন দেয়ালের ক্ষেত্রে ১২০ সিরিজ কাগজ বা পাথর দিয়ে ঘষে পরিষ্কার করে নিতে হবে। পুরাতন দেয়ালের ক্ষেত্রে স্ক্র্যাপার দিয়ে পরিষ্কার করে নিতে হবে। রং প্রয়োগের পূর্বে দেয়াল অবশ্যই ভালোভাবে শুকিয়ে নিতে হবে।

প্রথম ধাপঃ নতুন দেয়ালের ক্ষেত্রে ১ কোট অ্যাক্লোস্ সিলার (ওয়াটার বেইজড) প্রয়োগ করে ৩ - ৫ ঘণ্টা শুকিয়ে নিতে হবে। পুরাতন দেয়ালের ক্ষেত্রে ১ কোট প্লাস্টেলাইট ওয়াল সিলার (সলভেন্ট বেইজড) প্রয়োগ করে ১৮ - ২৪ ঘণ্টা শুকিয়ে নিতে হবে। দেয়ালে নোনা ধরার সম্ভাবনা থাকলে সে ধরণের দেয়ালে আভারকোট হিসেবে সন্ট সীল ব্যবহার করে নিতে হবে।

ষিতীয় ধাপঃ দেয়ালের বিভিনু গর্ত বা ক্রটি ভরটি ও মস্ণের জন্য পুটিলাইট ওয়াল পুটি প্রয়োগ করে ৩ - ৪ ঘন্টা শুকিয়ে নিতে হবে। অতঃপর ২২০ সিরিজ কাগজ দিয়ে ঘষে পরিস্কার করে নিতে হবে।


তৃতীয় ধাপঃ প্লাস্টেলাইট ওয়াল সিলার (সলভেন্ট বেইজড) অথবা অ্যাক্লোস সিলার (ওয়াটার বেইজড) দেয়ালে প্রয়োগ করুন যা যথাক্রমে ১৮ - ২৪ ঘন্টা ও ৩ - ৫ ঘন্টা শুকিয়ে নিতে হবে। অতঃপর ৩২০ সিরিজ কাগজ দিয়ে ঘষে মসুণ করে নিতে হবে।

চতুর্থ থাপঃ প্লাস্টেলাইট-এর সাথে ২৫% - ৩০% পরিস্কার ট্যাপের পানি মিশিয়ে পাতলা করে নিতে হবে। ভাল ফিনিশের জন্য ২ কোঁট রং প্রয়োগ করা যেতে পারে। গাঢ় শেড এর ক্ষেত্রে অতিরিক্ত ১ কোঁট রং প্রয়োগ করা যেতে পারে। প্রতি লিটারে ১৫০ - ১৬০ বর্গফুট জারগা রং করা যায়।

বিঃ দ্রঃ রং ব্যবহারের পূর্বে ভাল করে নেড়ে নিয়ে পরিস্কার ব্রাশ ও রোলার ব্যবহার করতে হবে। রং এর সঠিক উপযোগিতা পেতে চক পাউডার ব্যবহার না করাই উত্তম। প্রতিবার রং ব্যবহারের পর কোঁটার মুখ ভালোভাবে বন্ধ করে রাখতে হবে যেন বাতাস প্রবেশ না করে। রং প্রয়োগ শেষে ব্রাশ এবং অন্যান্য সরঞ্জাম ধুয়ে-মুছে রাখতে হবে। দেয়ালের অবাঞ্চিত দাগ ময়লা দূর করতে পানির সাথে ৫ ভাগ সাবান অথবা ডিটারজেন্ট পাউডার মিশিয়ে পাতলা কাপড দিয়ে পরিস্কার করতে হবে।



INTERIOR

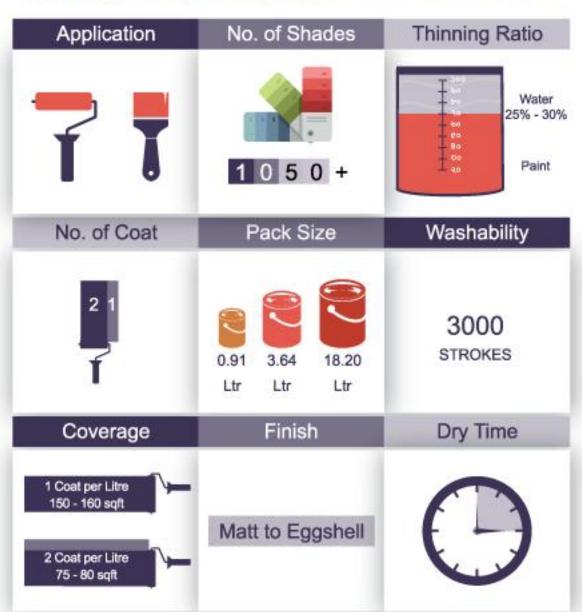





9001:2015
ISO CERTIFIED



CONTACT ADDRESS

CORPORATE OFFICE

ELITE PAINT & CHEMICAL INDUSTRIES LTD.

Syed Grand Centre (Level # 8 & 12), Plot # 89, Road # 28, Sector # 7, Uttara, Dhaka - 1230.

Tel: +88-02-58953558, 58953674, 58957813, Fax: +88-0258952907 E-mail: info@elitepaint.com.bd

CHATTOGRAM OFFICE & DEPOT

Elite House, CDA Avenue, GEC Square, Chattogram. Tel: 031-654022, 654024

CUMILLA DEPOT

House # 405/9, Road # 1 EPZ, South Asrafpur, Cumilla. Mobile: 01955-310436

SYLHET DEPOT

Atique View, House # 8, Road # 41, Block # C, Shahjalal Upashahar, Sylhet. Mobile: 01955-310457

KHULNA DEPOT

12, Sher-E-Bangla Road, Khulna. Tel: 041-2833900

BARISHAL DEPOT

Syed Manjil, M.A. Jalil Shorok, Nobogram Road (Old), Barishal. Mobile: 01955-310495

BOGURA DEPOT

Katnarpara (Behind Coronation School), Bogura. Tel: 051-63756

RAJSHAHI DEPOT

Debishingpara, Baliapukur, House # 26, Ward # 27, Islampur, Rajshahi. Tel: 0721-750725

MYMENSINGH OFFICE

Sourav Tower, 2/9 Mrittunjoyee School Road, Mymensingh Sadar, Mymensingh. Mobile: 01955-310331

DHAKA DEPOT (NORTH)

Morhum Mokhdum Ali Sharak (Sarkar Bari), Dhour, Turag, Dhaka. Mobile: 01955-310510

DHAKA DEPOT (SOUTH)

House # 447, Block # C, Rahim Market Road, West Mizimizi, Kandapara, Sanarpar, Siddirganj, Narayangonj. Mobile: 01955-310486

FACTORY

ELITE PAINT & CHEMICAL INDUSTRIES LTD. 92, Baizid Bostami Road, Industrial Area, Nasirabad, Chattogram, Bangladesh. Mobile: 01955-310530